

EZ Heat & EZ Heat Basic Instructions Coupling Kit Part No. 1006

With this kit you can connect an EZ Heat Basic System to an EZ Heat system or you can connect two EZ Heat Basic Systems.

1. Position the two systems parallel to each other with the outlet headers in line.
2. Remove the plugs from the upper end of both headers on the system that is to be connected to the pool. If you are connecting to an EZ Heat system, it must be the one connected to the pool.
3. Insert the hose adapter fittings into the header ends in place of the plugs. Before threading them into the fittings, wrap one or two layers of Teflon tape onto the end of the fitting in a clockwise direction. Keep the tape flat. Tighten the fitting no more than one half turn beyond finger tight.
4. Insert hose adapter fittings into the inlet and outlet fittings of the second system. Follow the procedures in step 3.
5. Slip 2 hose clamps over one of the filter hoses and connect the two outlet headers. If the hose is too long, cut it to fit. Tighten the hose clamps.
6. Use the remaining hose and claps to connect the two inlet headers. Tighten the hose clamps.

Now connect the systems to the pool, following the installation manual.

Harter Industries, Inc.

PO Box 502
Holmdel, NJ 07733

101 Church Street
Matawan, NJ 07747