



Notes:

- 1) Loads may be controlled by each ProStar as long as the load does not exceed the rating of the relay.
- 2) For larger loads, it may be necessary to install a diode as shown to limit the voltage across the relay coil when the load is shut off

Morningstar Corp.

Wiring Diagram for Controlling Large loads
with a ProStar Controller

Rev. 1.0 | Drawn By: jrd | No Scale

Date: 24 March 1998