


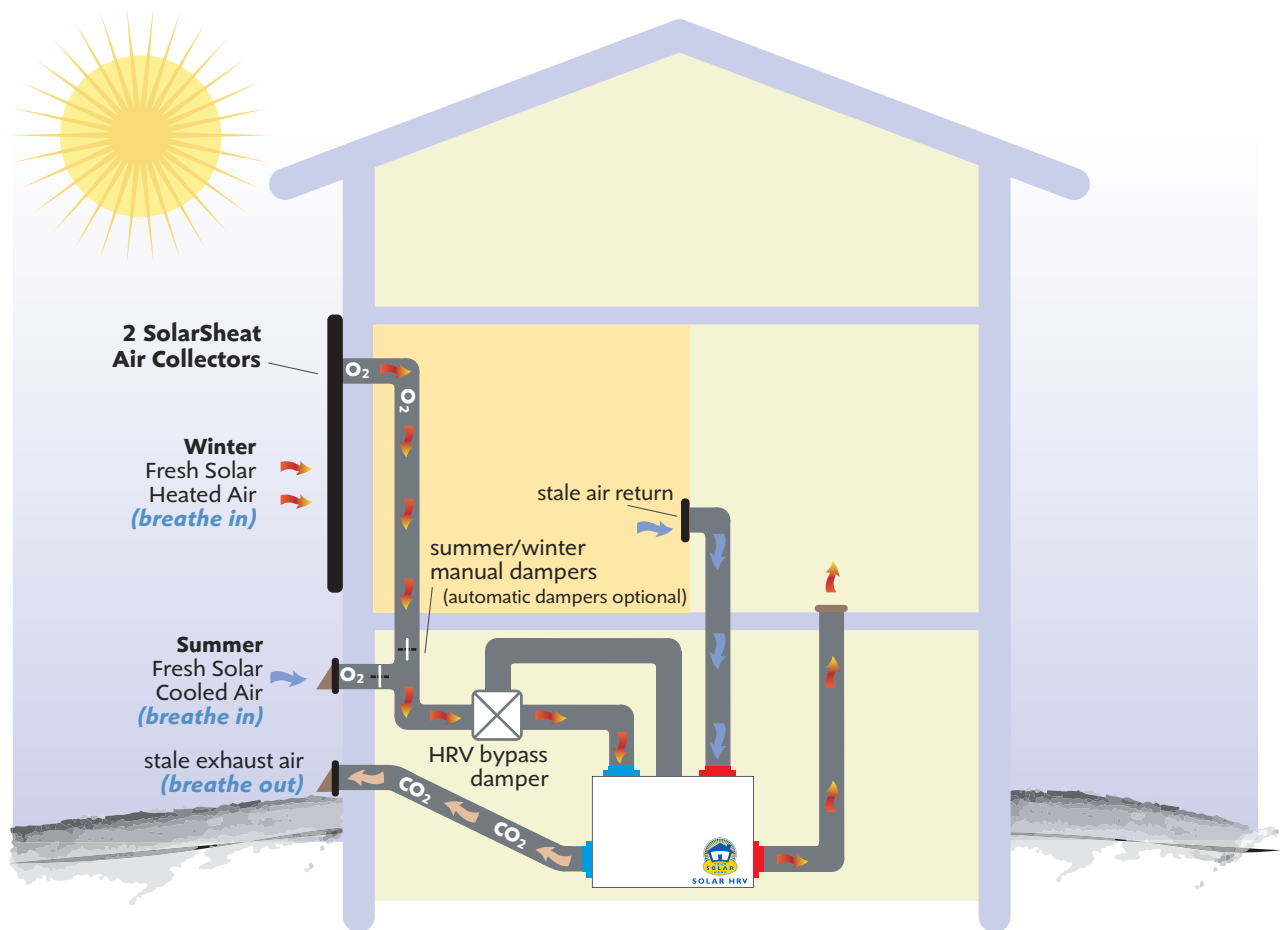

Solar HRV

Two SolarSheat air collectors are used to preheat the fresh air coming into the HRV during winter. When the incoming fresh air is above room temperature (68°F), the HRV bypass damper automatically redirects the air around the HRV core. This allows the solar heated air to be used inside the house at the maximum possible temperature.

*Your house needs to breathe too.
Now your house can breathe easier in
the winter. The SolarSheat preheats
incoming frigid air when it is sunny.*



© 2006. Your Solar Home Inc. All rights reserved.

299 Applewood Crescent, Unit 4, Vaughan, Ontario L4K 4E7
tel: 905.669.2212 or 866.556.5504 www.yoursolarhome.com