

SunRise Solar Inc.

Solar-powered Attic Fans


1-219-558-2211

High Wind Fastening Guidelines

Model FB

“SunRise 850, 1050, 1250”

* **HIGH WIND AREAS** * Base flashing must be secured with screws around perimeter of flashing not more than 9.25 inches apart, with a screw at each corner. Shingles may have to be removed where fan is installed to allow access to complete flashing. See Product Evaluation sheet SRS-24 for more information.

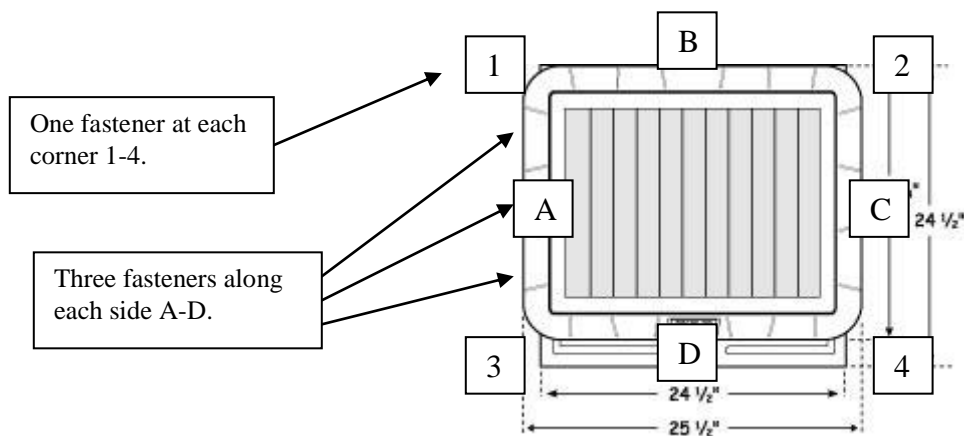

Note:

The manufacturer's installation instructions shall be available on the job site during installation. All fasteners shall be corrosion resistant as specified in the International Residential Code (IRC) and the International Building Code (IBC).

Attachments:

This addendum shall be accompanied by Product Evaluation SRS-24 and corresponding installation sheet for model FB. Evaluation shall be considered incomplete without such documentation.